



Electric Juicer

Model Series:
GS1750

OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1. Read all instructions and save for future reference.*
- 2. Before use, check that the voltage of wall outlet corresponds to the one shown on the rating plate.*
- 3. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning. Clean motor housing with wet cloth and wipe dry. Don't dip in water for rinse.*
- 4. The instrument is not intended to be used by persons disabled, with mental aberration or without related experiences and knowledge (including children), except they are supervised and directed by persons who are responsible for their safety to use the product.*
- 5. Close supervision is necessary for any appliance being used by or near children.*
- 6. Do not operate any appliance with a damaged supply cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.*
- 7. Don't let the supply cord hang over the edge of table or touch a hot surface.*
- 8. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.*
- 9. Don't use the appliance if the rotating cone is damaged.*
- 10. Switch off the appliance before changing accessories or approaching parts which move in use.*
- 11. Keep hands, hair, clothing, as well as other utensils away from juicer during operation to reduce the risk of injury to persons, and damage to the juicer.*

Introduction:

1. Read all instructions.
2. Check the voltage of your juicer before plugging it in. Before plugging in, ensure switch is off.
3. Wash all parts and components that come in contact with juice. Flush them with water and let air dry.

Cleaning:

Never use abrasive steel wool abrasive or erosive liquid (such as alcohol, gasoline or acetone) when cleaning the juicer parts.

1. Always switch off the motor and unplug the juicer.
2. Never immerse the motor housing in water, wipe with a damp cloth to clean it and wipe dry.
3. It is easy to detach all parts and components contact with juice rapidly, such as juicer head, filter, juice bowl and other apparatuses. Bowl pressing assembly shall be detached in counterclockwise direction holding the handle. It is quite sharp on the bowl edge; please pay more attention to avoid scratches to your hands. When assembling the bowl pressing assembly, note to ensure the bowl is always in contact with the bench. Screw up in clockwise direction. Please operate carefully to avoid scratches to your hands.
4. Rinse all parts coming into contact with the juice immediately after use.
5. Take care to wash all parts in contact with the juice before using the appliance for the first time.

 
 
 
Specifications:

Power supply	50/60Hz
Volts	120
Watts	180
Dimensions(L×W×H)	11.0"×7.75"15.50"

How To Operate:


1. Cut the fruit in half.
2. Put a cup under the spout.
3. Plug in the socket. Switch to the position of "1". Align the center of cut orange with the top of juicer head and put it down. Press handle to make juicer head rotate. Impose even pressure until juice is flowing out (see Fig 2). Then take out the peel and replace it with another cut orange. Repeat above operation. Pay attention to clean pumice in the filter to avoid overflow of pumice.
4. Switch to the position of "0" and unplug when finished using juicer.

Don't press too tight. If you hear that the motor is rotating more slowly or that it stops, you are pressing too tight. The motor will not become damaged because the thermal protective device turns the motor off if overstrained. If this occurs, we advise you to turn the juicer off with the on/off switch. After a few minutes, the motor will cool off and the Juicer can be used again. Always switch the juicer off after use.

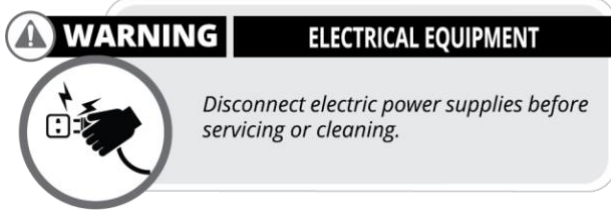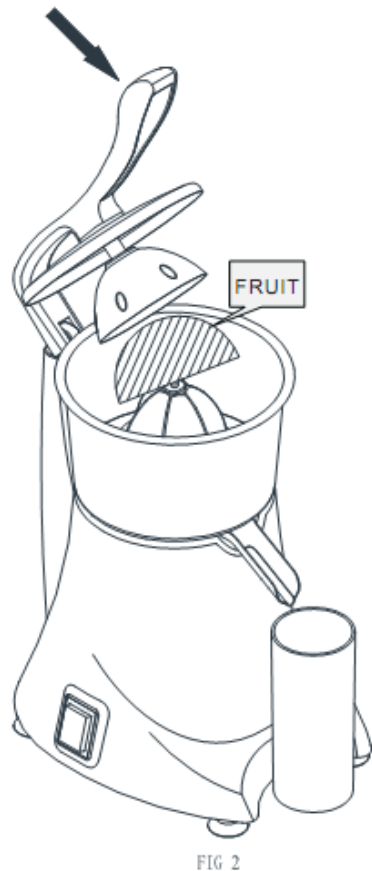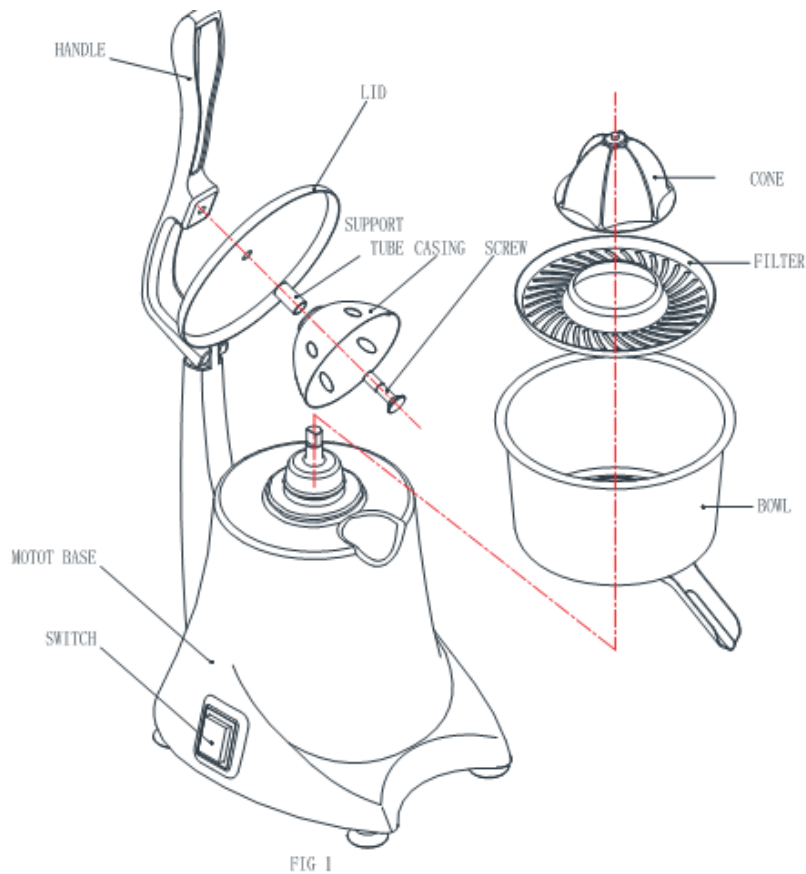

FOR SERVICE, PARTS, OR TECHNICAL HELP
PLEASE CONTACT GLOBAL SOLUTIONS AT
1-800-782-6164 OR
www.GlobalSolutionsFoodEquipment.com

 MODEL: GS1750, JUICER

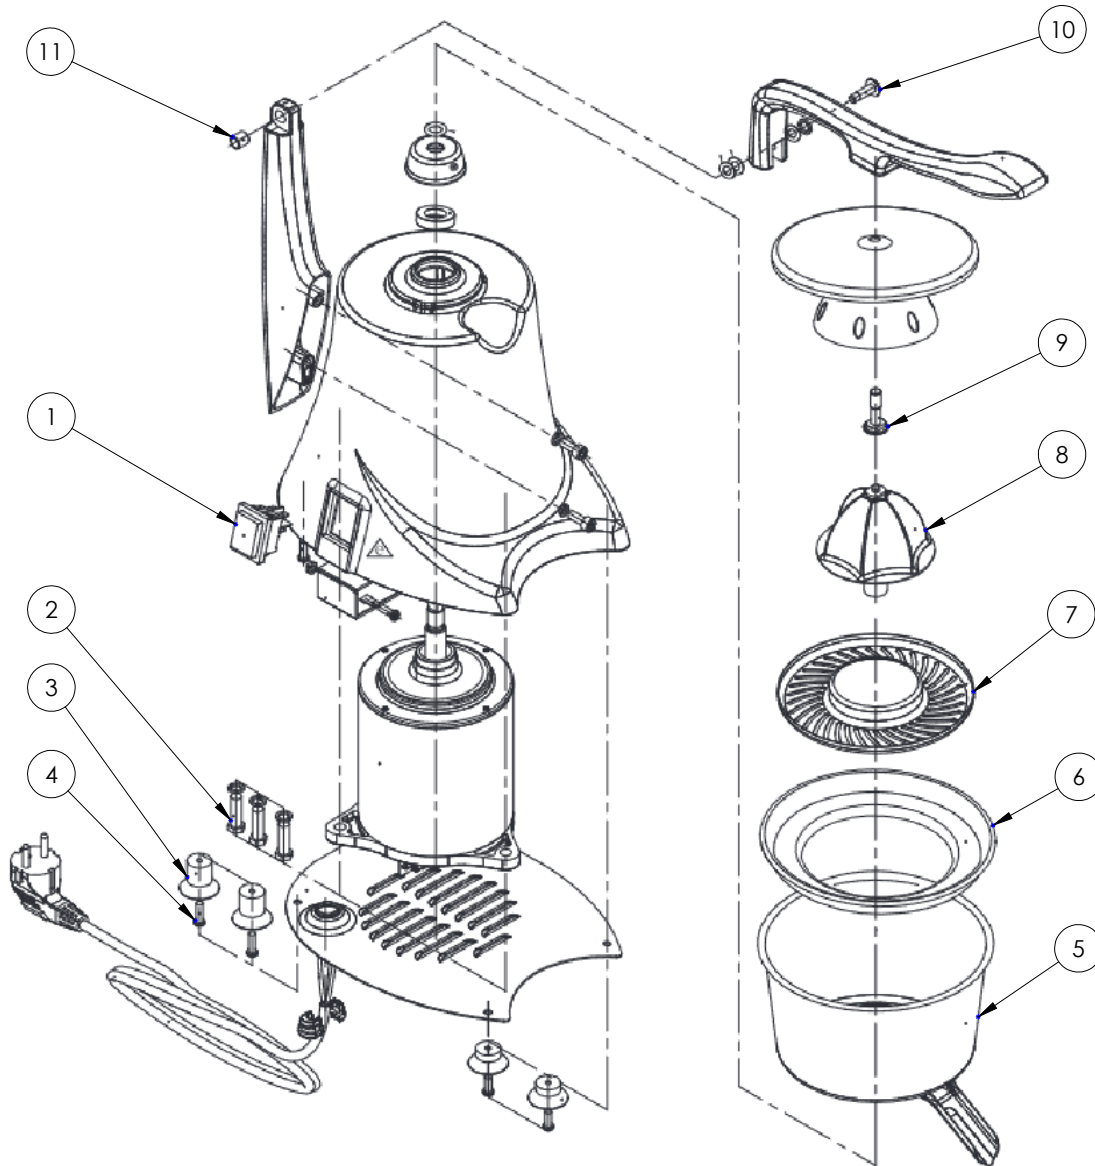

NUMBER	PART NUMBER	DESCRIPTION
1	GS10549	SWITCH
2	GS10550	BOLT, M8 X 15
3	GS10551	UNDERLAY
4	GS10552	BOLT, M5 X 15
5	GS10553	BOWL
6	GS10554	NO-SPLASH PLATE
7	GS10555	PIP-FILTER
8	GS10556	CONE
9	GS10557	STEP BOLT
10	GS10558	SHAFT
11	GS10559	AXES SHEACH