



Countertop Bottle Warmers

Models FW-CN-1601, 1602, 1603, 1604

Items 44177, 44178, 44179, 44180

Instruction Manual



Revised - 12/05/2025



Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com



Table of Contents

Model FW-CN-1601 / Model FW-CN-1602
Model FW-CN-1603 / Model FW-CN-1604

Section	Page
General Information -----	3 - 4
Safety and Warranty -----	4 - 5
Technical Specifications -----	6
Installation -----	6
Operation -----	6
Maintenance -----	7
Parts Breakdown -----	8 - 12
Electrical Schematics -----	13 - 16
Notes -----	17 - 18
Warranty Registration -----	19

General Information

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bon de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueillis par un tiers transporteur.

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les

General Information

consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

Safety and Warranty

WARNING

- The unit has been installed with a thermal cut out to avoid over heating or damage to the element.
- If the power cord is damaged, it must be replaced by qualified technician.

Caution: Don't touch the surface when the appliance is working, It is hot.

Safety and Warranty



Note: the supplied plastic bottles are graded Recycle #5 which allows the plastic to be used in heats that are below 170°C / 338°F and is dishwasher safe.

Note: Omcan squeeze bottles are considered wear and tear items and are not covered under the one year machine warranty. If a squeeze bottle shows signs of leakage it should be replaced immediately to avoid injury.

RESIDENTIAL USERS: vendor assumes no liability for parts or labor coverage for component failure or other damages resulting from installation in non-commercial or residential applications. The right is reserved to deny shipment for residential usage; if this occurs, you will be notified as soon as possible.

1 YEAR PARTS AND LABOUR BENCH WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule a drop off to either an Omcan authorized service depot in the area, or to an Omcan Service warehouse to repair the equipment.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see <https://omcan.com/disclaimer> for complete info.

WARNING:

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications

Model	FW-CN-1601	FW-CN-1602	FW-CN-1603	FW-CN-1604
Item Number	44177	44178	44179	44180
Bottle Capacity	1	2	3	4
Material	Stainless Steel			
Temperature Range	45 - 90°C / 113 - 194°F			
Power	200W	400W	600W	800W
Electrical	110-120V / 60Hz / 1			
Weight	5.5 lbs. / 2.5 kgs.	9.3 lbs. / 4.2 kgs.	13.2 lbs. / 6 kgs.	16.8 lbs. / 7.6 kgs.
Packaging Weight	6.6 lbs. / 3 kgs.	10.6 lbs. / 4.8 kgs.	15 lbs. / 6.8 kgs.	18.5 lbs. / 8.4 kgs.
Dimensions	7.3" x 6.6" x 12.8" 186 x 167 x 324mm	7.3" x 12.1" x 12.8" 186 x 307 x 324mm	7.3" x 17.6" x 12.8" 186 x 447 x 324mm	7.3" x 23.1" x 12.8" 186 x 587 x 324mm
Packaging Dimensions	9.3" x 10" x 14.8" 235 x 255 x 375mm	14.8" x 10" x 14.8" 375 x 255 x 375mm	20.3" x 10" x 14.8" 515 x 255 x 375mm	25.8" x 10" x 14.8" 655 x 255 x 375mm

Installation

Take out the warmer from the packaging and locate the unit on a firm level surface.

When this unit is to be positioned in close proximity to a wall, partitions, kitchen furniture, decorative finished, etc., it is recommended that they be made of non-combustible material, if not, they shall be clad with a suitable non-combustible heat-insulating material, and that the closet attention be paid to fire prevention regulations.

Once the warmer has been placed in position by consulting international standards and regulations. The warmer is ready to operate.

Operation

Plug the power cord into the power supply, switch on the unit, turn the temperature dial clockwise to the desired setting, when not in use, just simply turn off the thermostat and unplug the power.

Note: this unit does not use water to heat the bottles. Use dry heat only.

Maintenance

- Clean using warm soapy water after each use.
- Do not immerse completely in water to clean.
- The unit is not to be cleaned with a water jet.


HELP

If the warmer does not work, please check the following:

1. The power supply is correct.
2. The element is not damaged.


Parts Breakdown

Model FW-CN-1601 44177

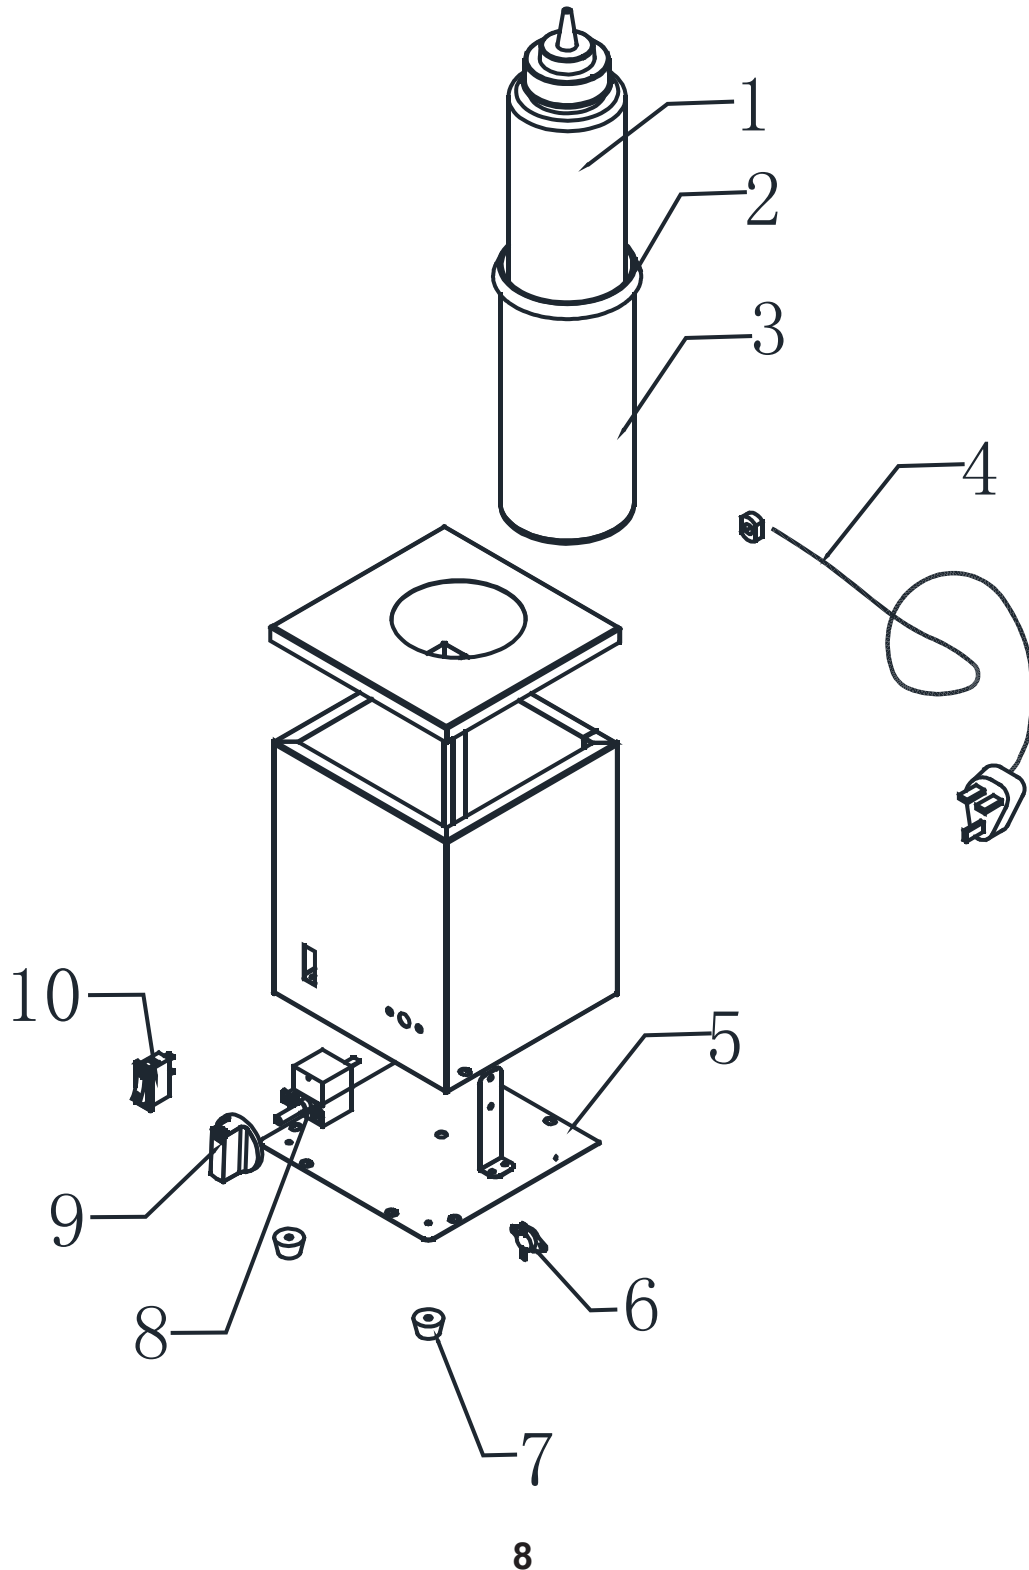


Parts Breakdown

Model FW-CN-1602 44178

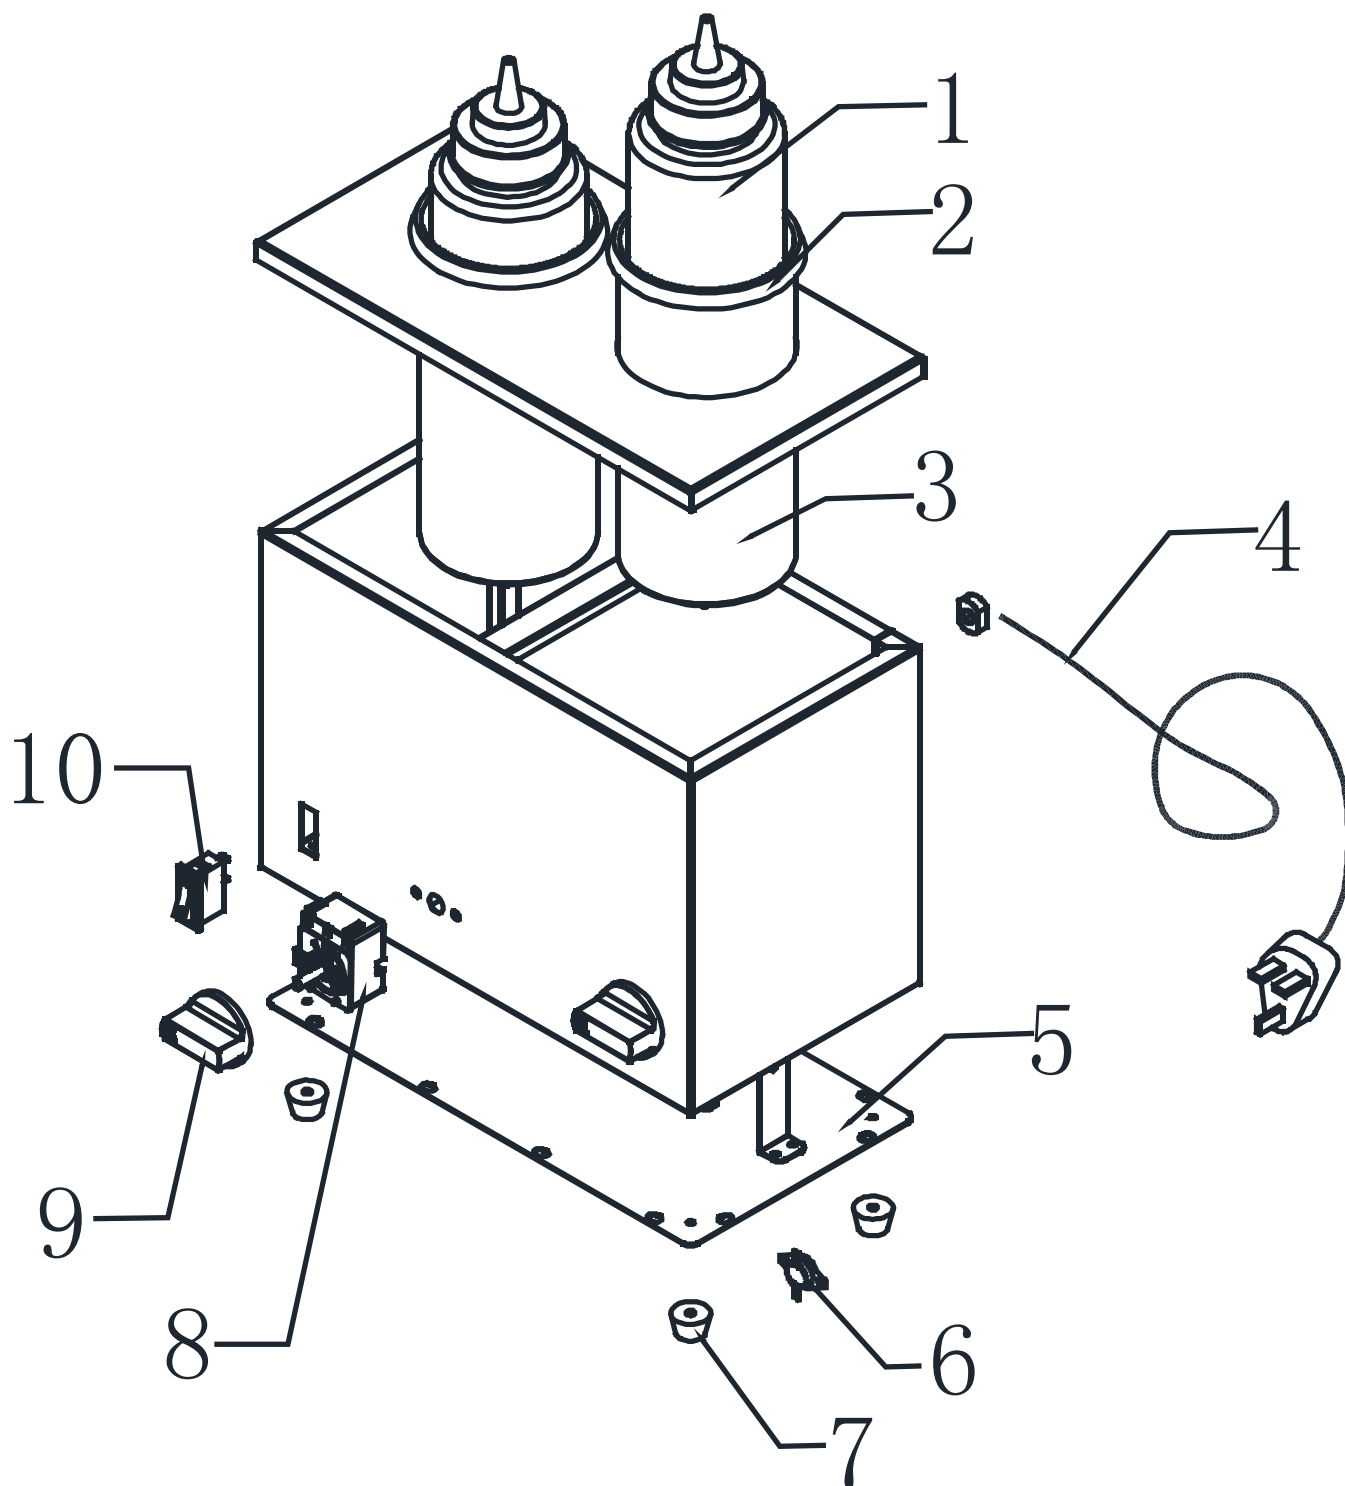


Parts Breakdown

Model FW-CN-1603 44179

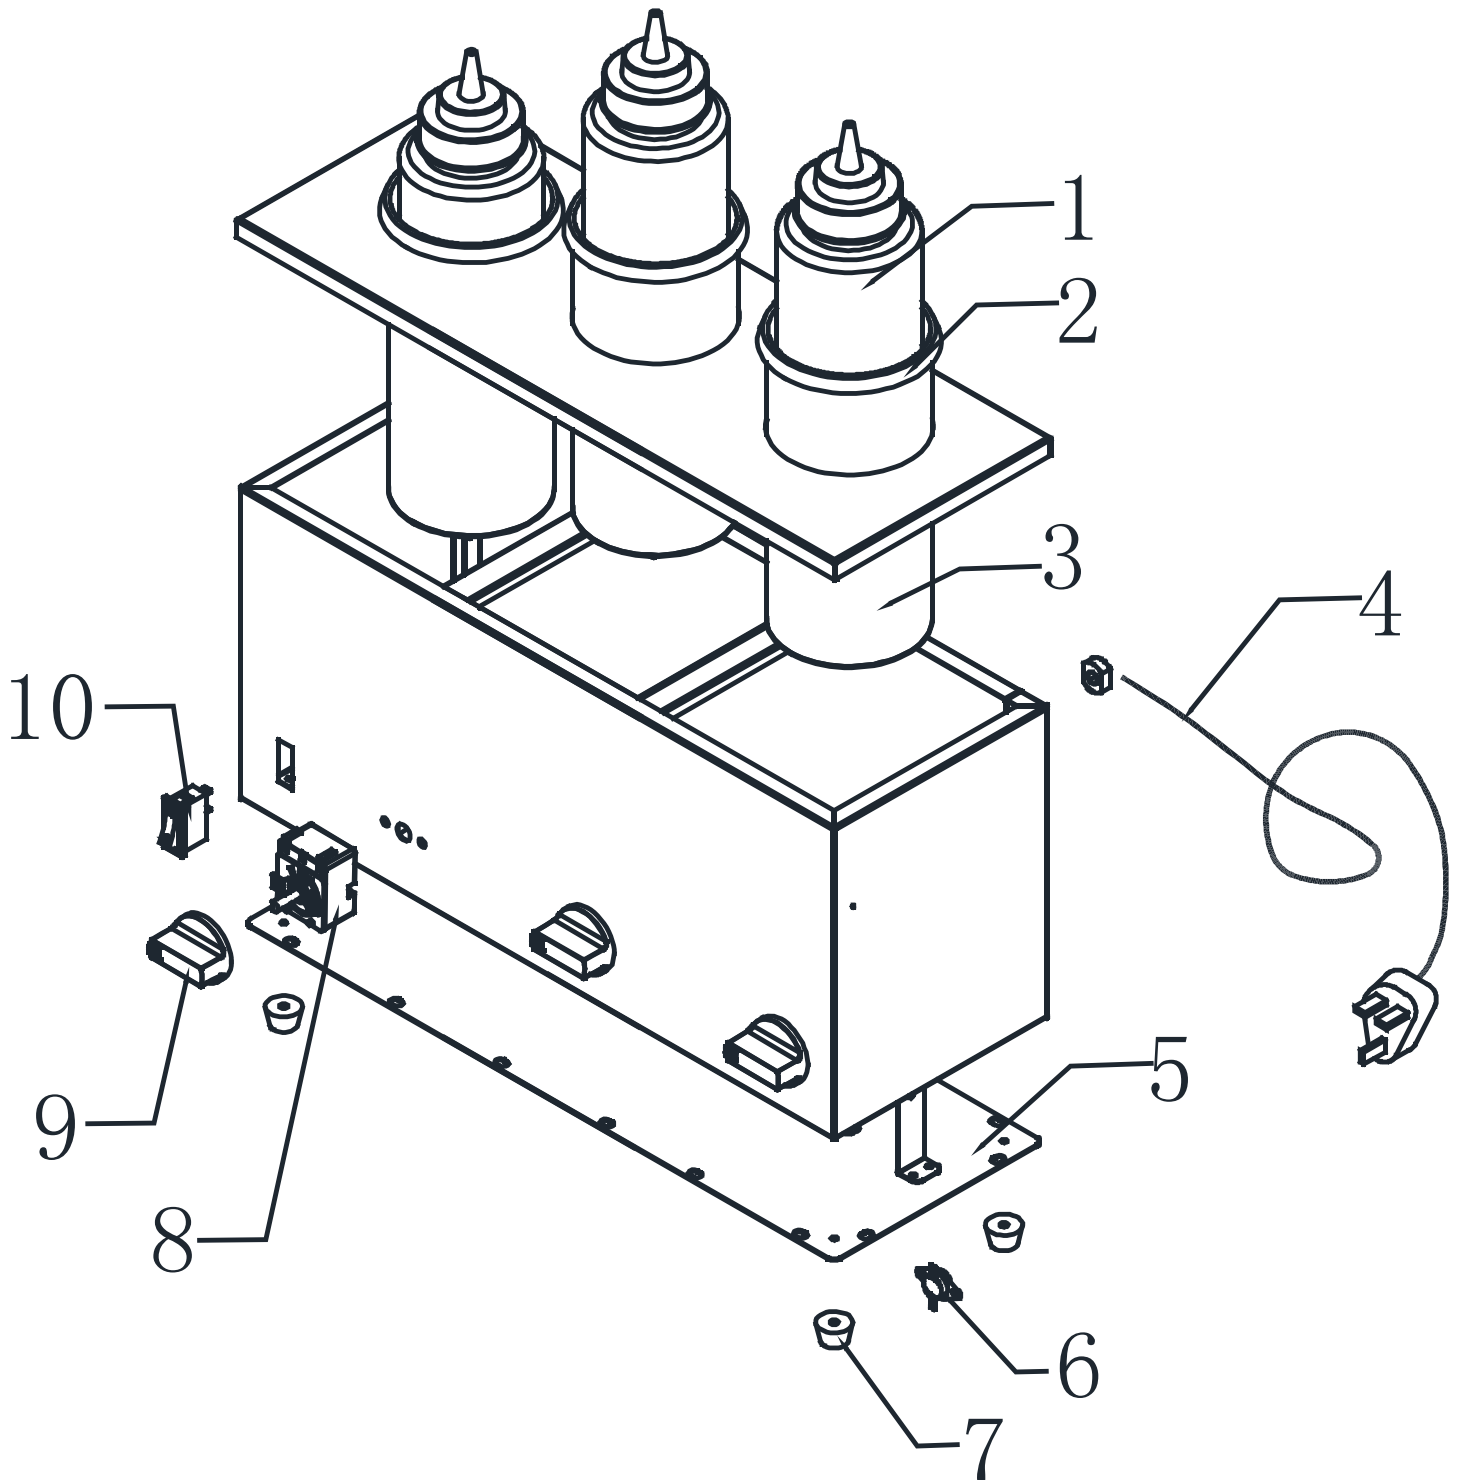

Parts Breakdown

Model FW-CN-1604 44180

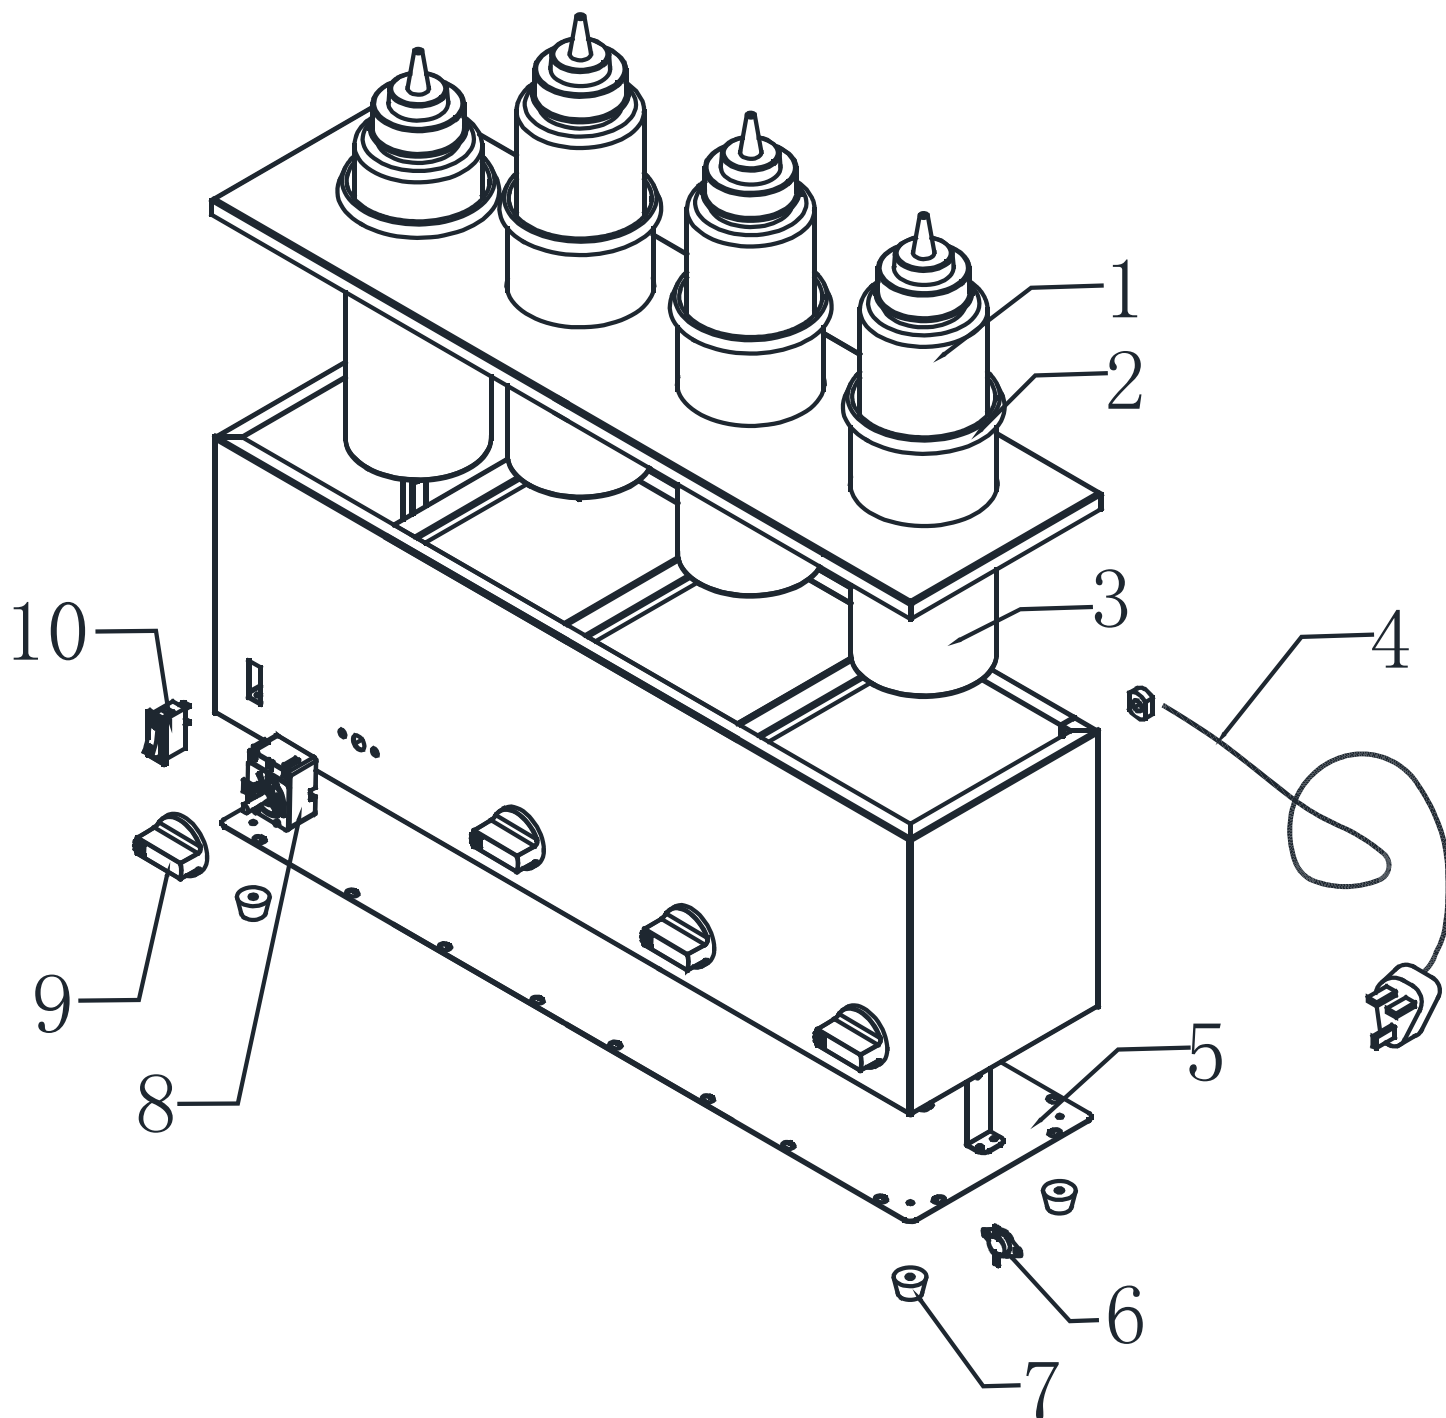

Parts Breakdown

Model FW-CN-1601 44177

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
65019	32OZ CLEAR BOTTLE WITH 1 SPOUT DISHWASHER SAFE RECYCLE 5 FOR 44177	1	64995	BASE FOR 44177	5	64999	DIAL FOR 44177	9
64992	POT FOR 44177	2	64996	THERMAL CUT OUT FOR 44177	6	65000	SWITCH FOR 44177	10
64993	ELEMENT FOR 44177	3	64997	FEET FOR 44177	7			
64994	PLUG AND LEAD FOR 44177	4	64998	THERMOSTAT FOR 44177	8			

Model FW-CN-1602 44178

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
65019	32OZ CLEAR BOTTLE WITH 1 SPOUT DISHWASHER SAFE RECYCLE 5 FOR 44178	1	65001	BASE FOR 44178	5	64999	DIAL FOR 44178	9
64992	POT FOR 44178	2	64996	THERMAL CUT OUT FOR 44178	6	65000	SWITCH FOR 44178	10
64993	ELEMENT FOR 44178	3	64997	FEET FOR 44178	7			
64994	PLUG AND LEAD FOR 44178	4	64998	THERMOSTAT FOR 44178	8			

Model FW-CN-1603 44179



Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
65019	32OZ CLEAR BOTTLE WITH 1 SPOUT DISHWASHER SAFE RECYCLE 5 FOR 44179	1	65002	BASE FOR 44179	5	64999	DIAL FOR 44179	9
64992	POT FOR 44179	2	64996	THERMAL CUT OUT FOR 44179	6	65000	SWITCH FOR 44179	10
64993	ELEMENT FOR 44179	3	64997	FEET FOR 44179	7			
64994	PLUG AND LEAD FOR 44179	4	64998	THERMOSTAT FOR 44179	8			

Model FW-CN-1604 44180

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
65019	32OZ CLEAR BOTTLE WITH 1 SPOUT DISHWASHER SAFE RECYCLE 5 FOR 44180	1	65003	BASE FOR 44180	5	64999	DIAL FOR 44180	9
64992	POT FOR 44180	2	64996	THERMAL CUT OUT FOR 44180	6	65000	SWITCH FOR 44180	10
64993	ELEMENT FOR 44180	3	64997	FEET FOR 44180	7			
64994	PLUG AND LEAD FOR 44180	4	64998	THERMOSTAT FOR 44180	8			



Electrical Schematics

Model FW-CN-1601 44177

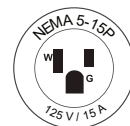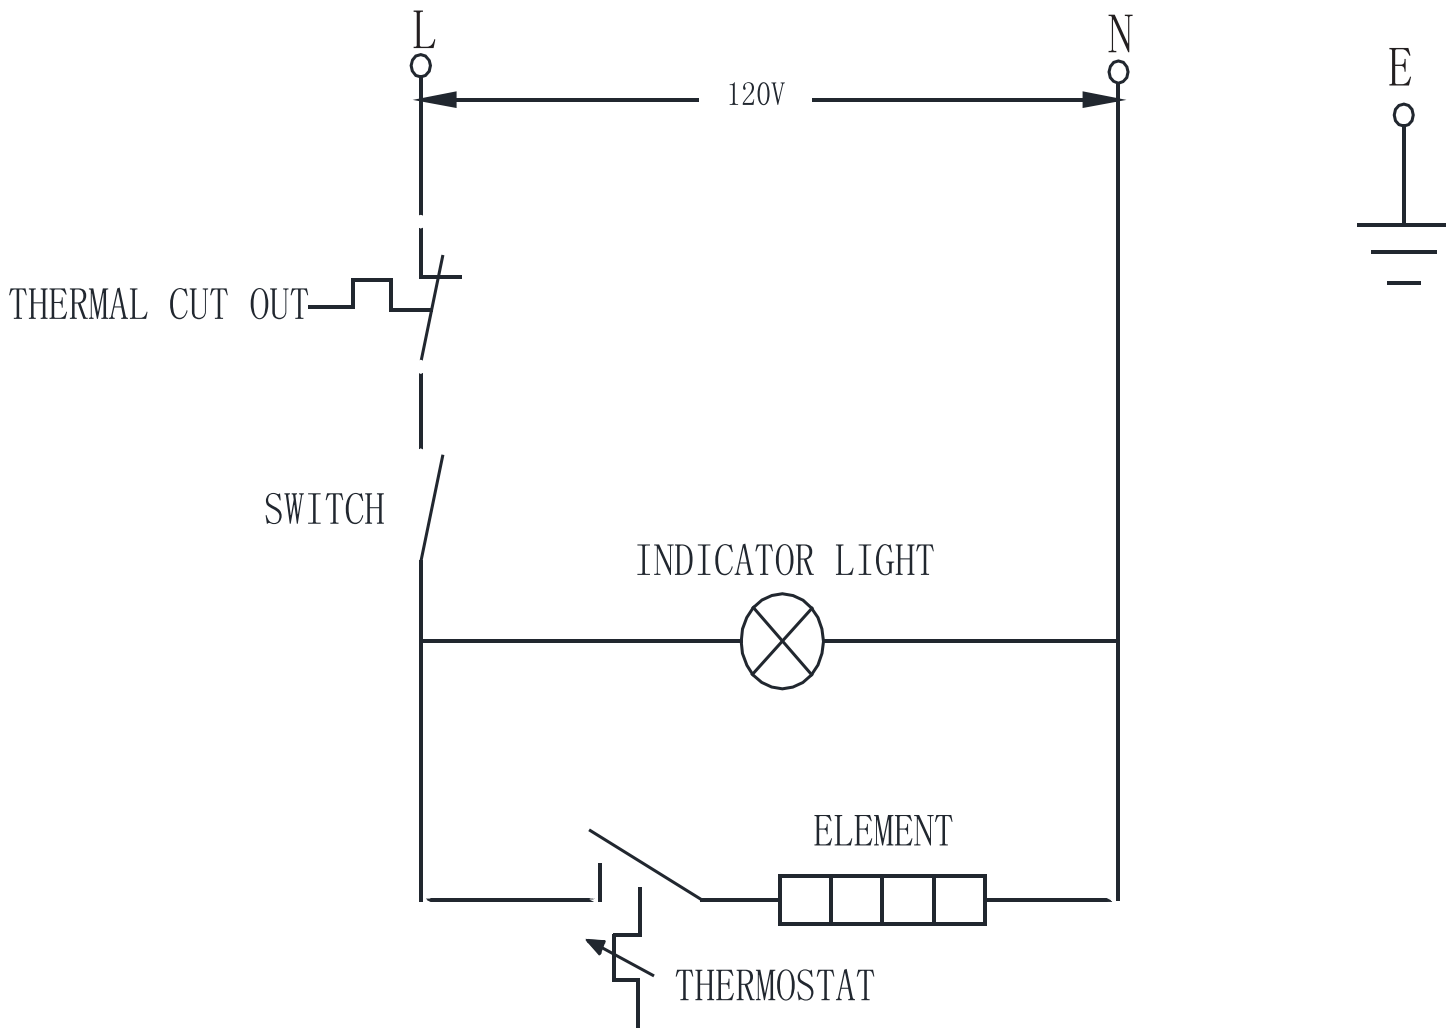


Electrical Schematics

Model FW-CN-1602 44178

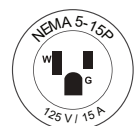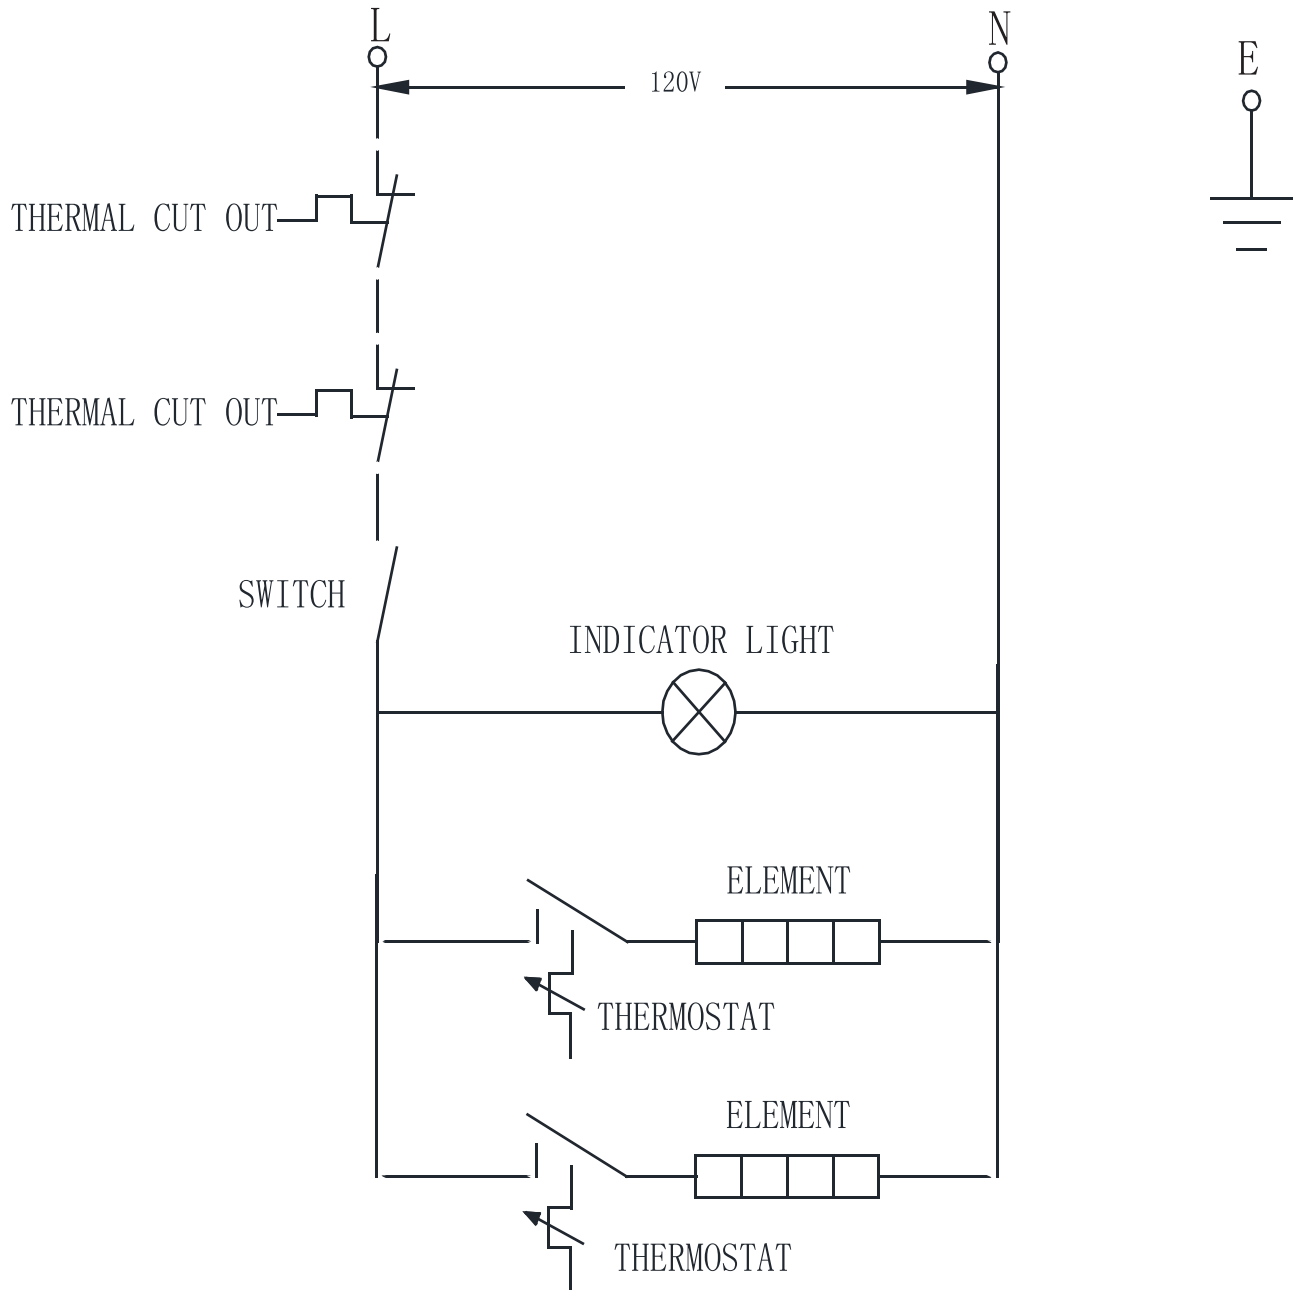



Electrical Schematics

Model FW-CN-1603 44179

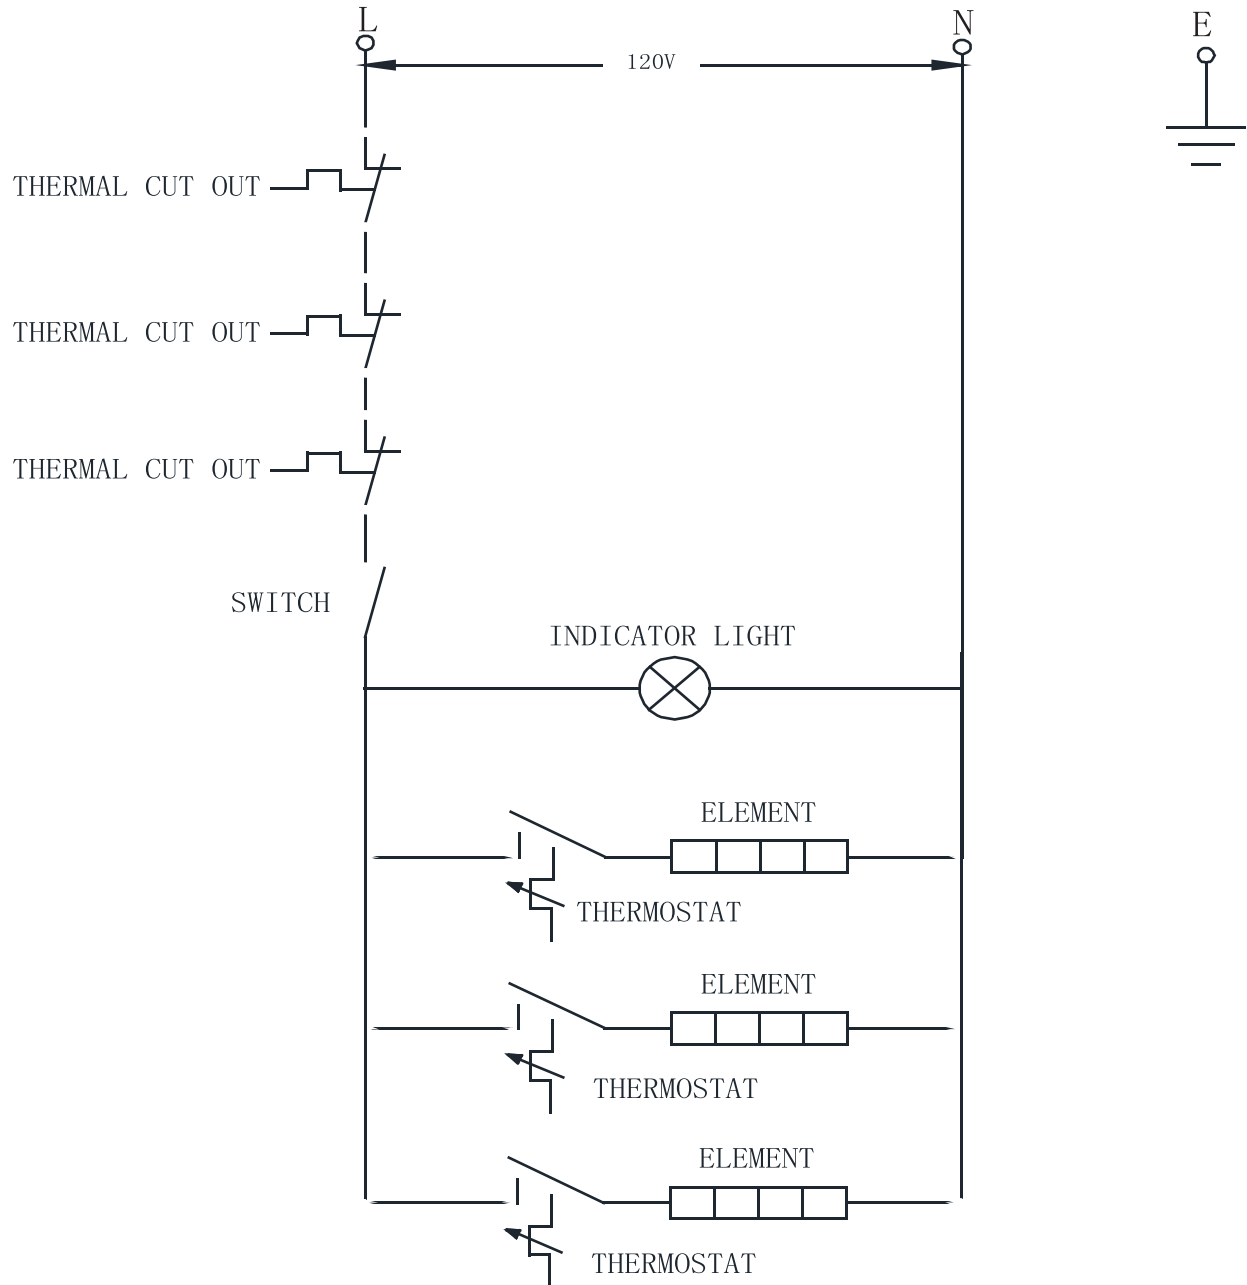

Electrical Schematics

Model FW-CN-1604 44180

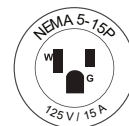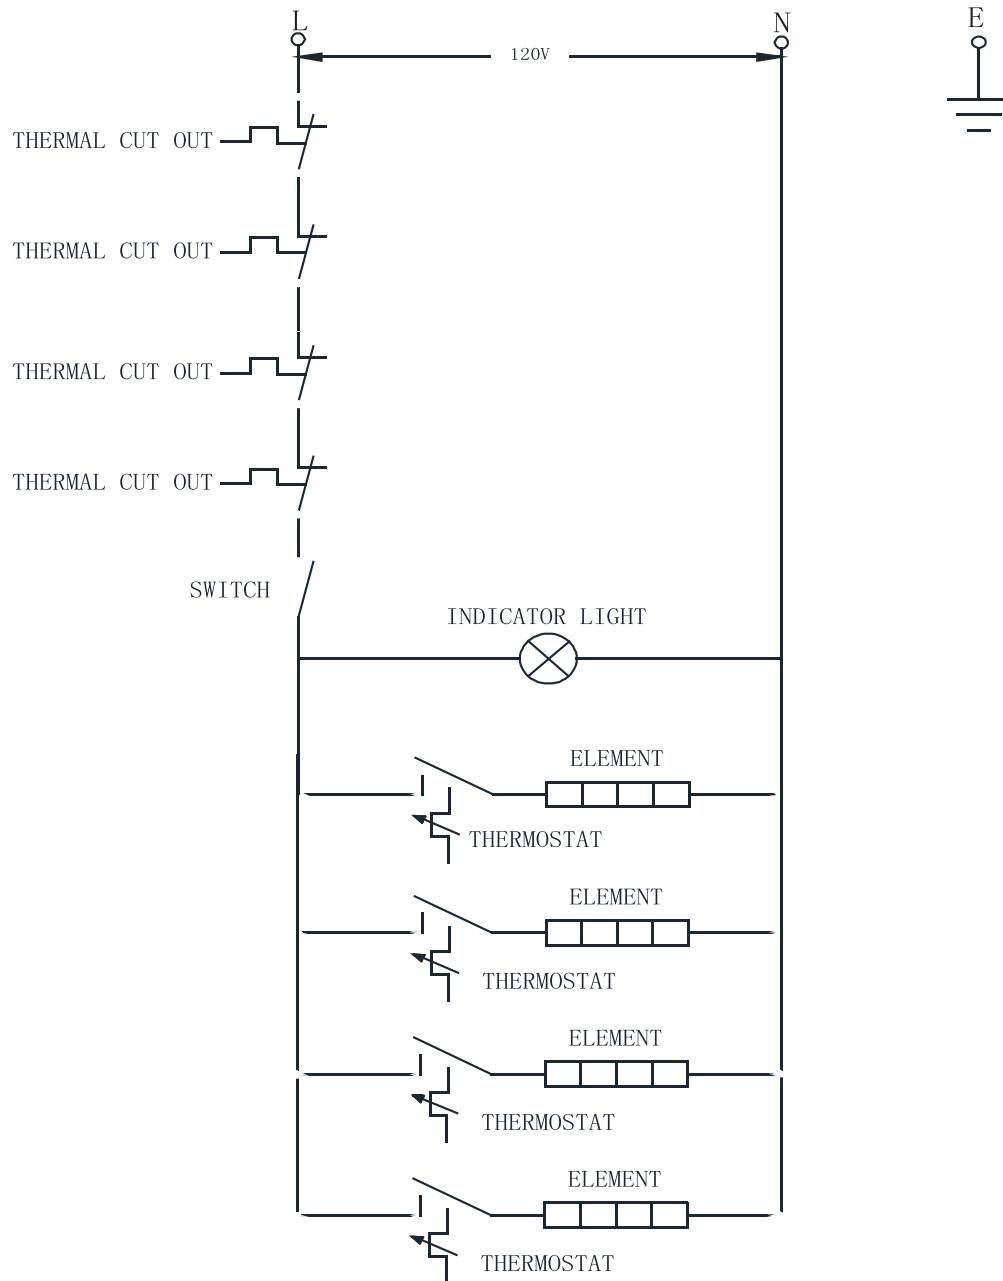

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

<https://omcan.com/warranty-registration/>

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

OMCAN

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____

Address: _____

City: _____ Province or State: _____ Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Model Name: _____ Model Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

- | | | |
|--|--------------------------------------|----------------------------------|
| ☐ Restaurant | ☐ Bakery | ☐ Deli |
| ☐ Butcher | ☐ Supermarket | ☐ Caterer |
| ☐ Institution (<i>specify</i>): _____ | | |
| ☐ Other (<i>specify</i>): _____ | | |

Serial Number: _____

Date of Installation (MM/DD/YYYY): _____

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.

